

## Audio Recording configuration with IPC314

**Step1: Ensure or upgrade the IPC314SR-DVPF28 to firmware: IPC\_G6102-B5011D1604 or newer.**

**Step2: Log in Web interface of the IPC: SETUP→VIDEO&AUDIO→AUDIO, then ensure (As Fig.1):**

- a. **AUDIO INPUT** is on;
- b. **INPUT GAIN** is 220+;
- c. Enable '**CHANNEL2**' for the built-in MIC.

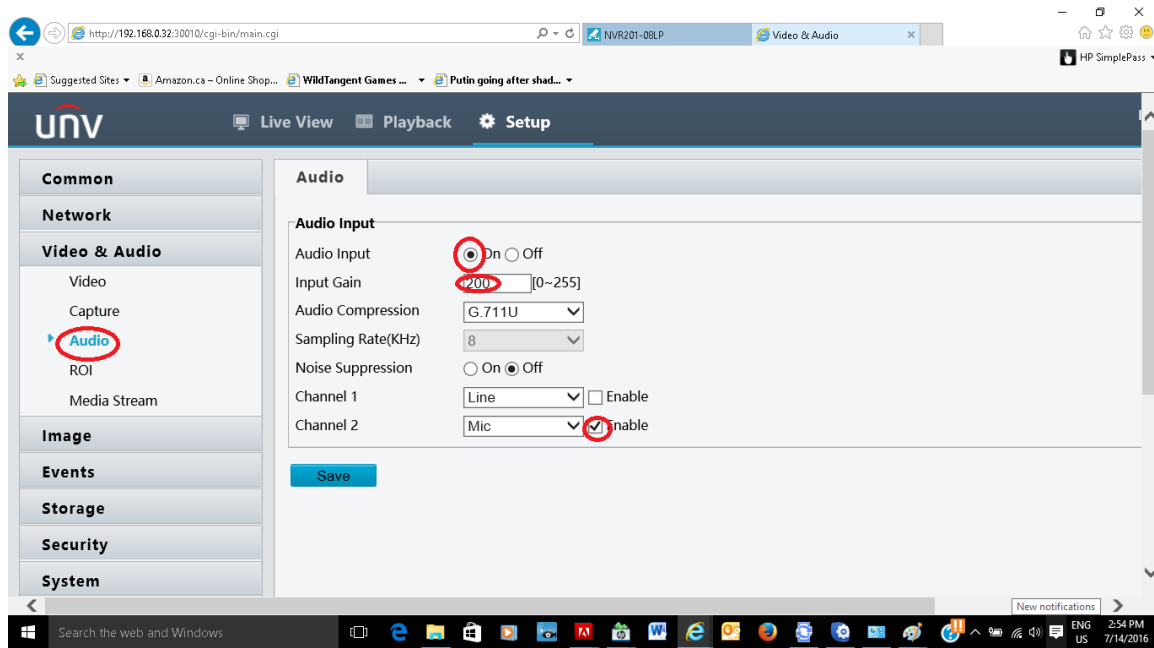


Fig.1

**Step3: Ensure the speaker on your PC is working well. Then go to LIVE VIEW of IPC's Web interface, make sure the MIC button is enabled as Fig.2, then you should be able to hear the sound coming from the IPC's MIC.**

**Step4: Reconnect the IPC to the POE port of NVR, ensure it's on line. Then log in Web interface of the NVR. Go to LIVE VIEW of the NVR, make sure the speaker button is enabled as Fig.3, then you should be able to hear**

the sound coming from IPC's MIC., and the sound should be heard from the playback.

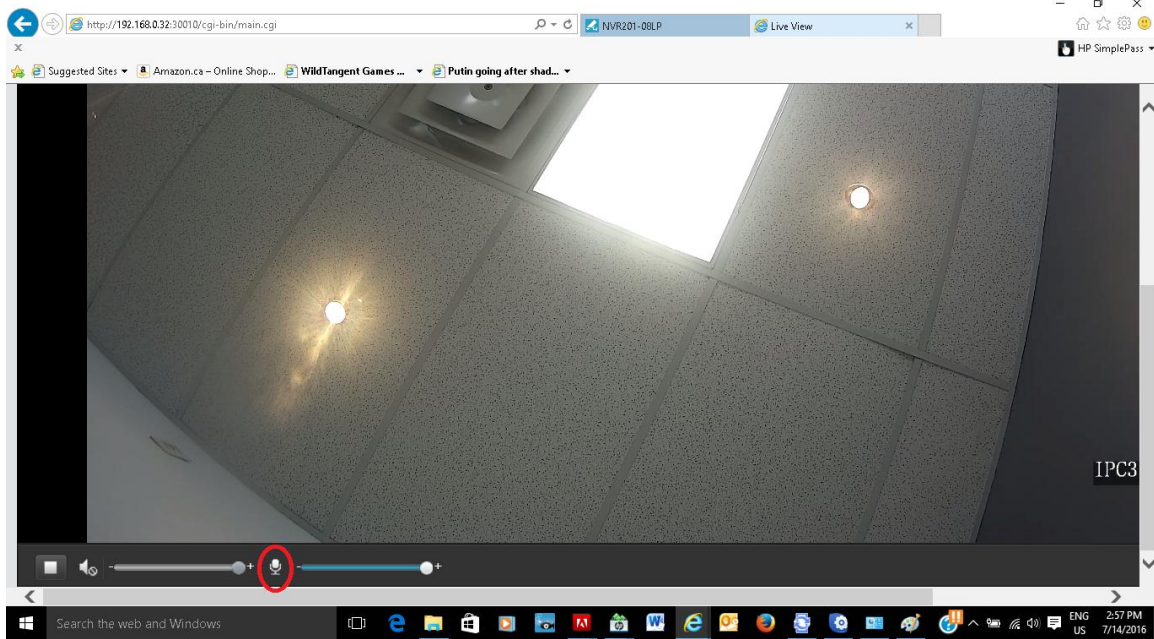


Fig.2

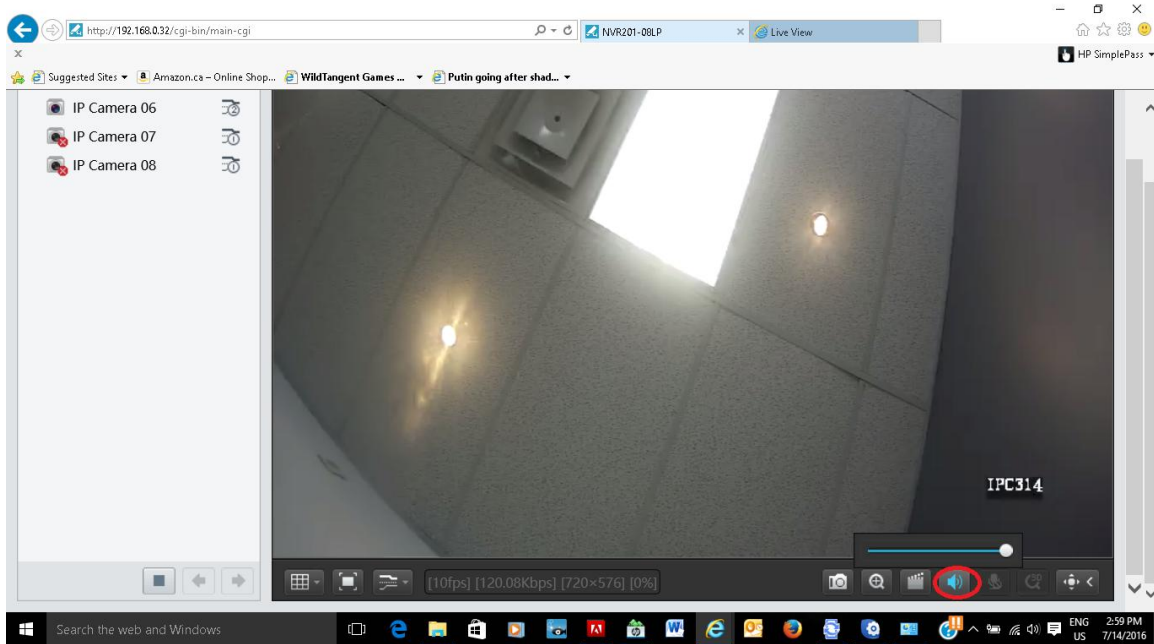


Fig.3

CONTACT US

If you have any questions, feel free to contact us, +1 (647) 748-7382 .  
Our support is available Monday – Friday, 9:00 AM – 6:00 PM (EST).  
Email: [support@petawise.com](mailto:support@petawise.com)  
Our office address:  
#9 – 1040 Martin Grove Road, Toronto, Ontario, M9W 4W4, CANADA