

How to upgrade Uniview NVR firmware?

Step1: Receive the Firmware file,
and save it to your USB Driver **root**
directory.

Step2: Plug in USB Driver to your
NVR.

Step3: On the NVR interface (HMI):

MENU → MAINTAIN →
UPGRADE: Click the button
'Upgrade', choose the file saved on

your USB to complete the upgrade
procession.

Step 4: After NVR reboot, go to
MENU → MAINTAIN: click the tab
'System Info' to confirm the
'Firmware Version' is the right
Version number.

CONTACT US

If you have any questions, feel free to contact us, +1 (647) 748-7382.
Our support is available Monday – Friday, 9:00 AM – 6:00 PM (EST).

Email: support@petawise.com

Our office address:

#9 – 1040 Martin
Grove Road, Toronto, Ontario,
M9W 4W4, CANADA